


## Suction Lifter Set

- 1 Suction cup
- 2 Handle
- 3 Clamping lever
- 4 Ratchet
- 5 Strap

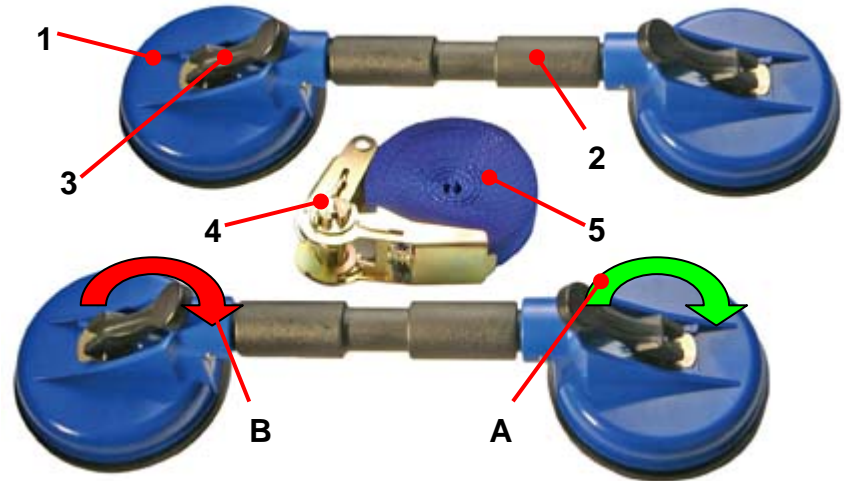

**A** Clamping lever, activated  
Suction cup is disabled when both clamping levers are tilted inwards

**B** Clamping Lever, deactivated  
Suction cup is deactivated when both clamping levers are tilted outwards

### GENERAL INFORMATION

This set is used for assembly of windshields. The clamping strap is for holding of the glued windshields until the glued is hardening. The suction cups are made for lifting and transporting of windshields and have a load capacity of 60 kg per lifting handle.

### SAFETY INFORMATION

- Please use the Suction caps, **always in pairs !!!**  
Individual using for Lifting and Carrying, might have the result that the windshield will possibly fall down.
- The strap is **not** suitable for securing cargo.
- The strap is **not** suitable for lifting and carrying loads.
- Installing the tension belt and make sure that varnish, weather strips or another parts will not cause damage in connection with install process
- Put the straps not near or in chemicals.
- Never pull the strap over rough surfaces or Sharp corners.
- Never lay the strap over hot surfaces.
- Avoid using the strap only at temperature range - 20 °C - +60°C.



### INSPECTION

- Before use always inspect the strap for possible damage.
- If the strap has been damaged replace it immediately.

### STORAGE

- Store the strap only in dry, slightly heated areas and protect from direct sunlight.
- Never dry or store the strap near fire or hot areas.
- Never store the strap with chemicals.

### CLEANING

- Clean Straps only with lukewarm, mild soft-soap solution and a brush.
- Do not use chemical cleaners or solvents.
- Allow Straps to dry thoroughly in the air.